


# 10' x 10' TENT (Standard, Deluxe & Premium)

Standard item #'s: 240610 thru 240619  
 Deluxe item #'s: 240620 thru 240629 24HR QS: 240690 thru 240693  
 Premium item #'s: 240630 thru 240639 24HR QS: 240700 thru 240703  
 Deluxe item #'s (vented canopy): 240350 thru 240358  
 Premium item #'s (vented canopy): 240410 thru 240418  
 48HR QS: 240688, 240698, 240708

## Product Parts

- 1 - Frame
- 2 - Soft Case with Wheels
- 3 - Canopy
- 4 - Stake Kit



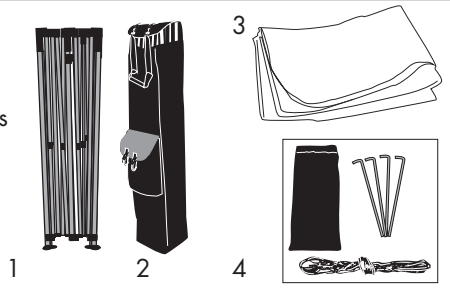


Scan to view Product Instructional Videos or visit:  
<http://www.creativeDisplaysite.com/showstoppertent.html>

**VIDEO IS FOR PREMIUM FRAME and CANOPY INSTRUCTIONS.**



**NOTE:**  
 Standard/Deluxe and Premium Tent Frames have same set up instructions.  
 However, Standard Frames have a push button height adjustment. See detail:

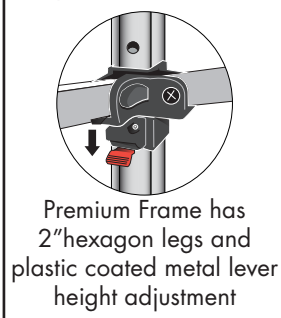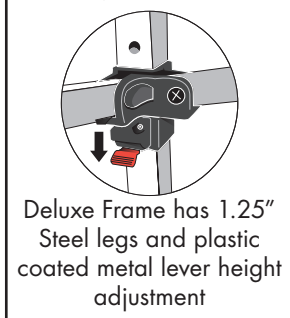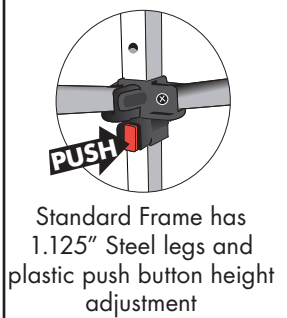


## Set-Up

### Step 1


Remove the Frame (1) from the Soft Case (2) and place it at your desired location.

In tandem with another person, separate the legs of the Frame (1) until they are extended a full arms length.

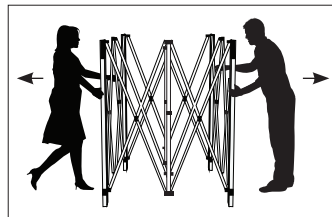


### Step 2

Unfold your Canopy (3) and drape over the Frame (1). Position the apex of the Canopy (3) with the center pole of the Frame (1).

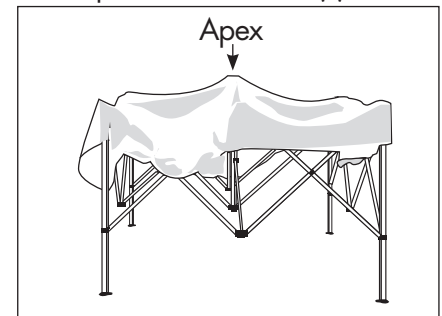


### Step 3

Attach the Canopy (3) by connecting the loop strips on the Canopy (3) corners with the hook strips on the four legs of the Frame (1).

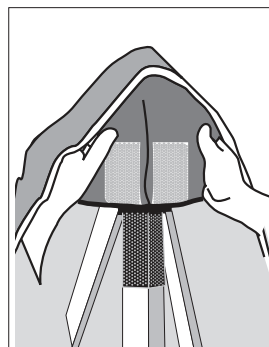

### Step 4

Stand diagonal to each other, lift and separate the legs of the Frame (1). The Frame (1) will open a little at a time so alternate ends until the Frame (1) no longer expands.


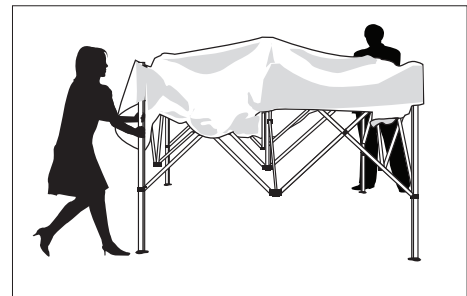


**DO NOT DRAG FRAME-THIS COULD BEND THE LEGS**

## Set-Up Continued...

### Step 5

Unlock the Height Adjustment connectors (lever or button) on Frame (1) legs. With connector in unlock position, lift the framework upwards until the four sliding connectors lock into place on the legs of the Frame (1).

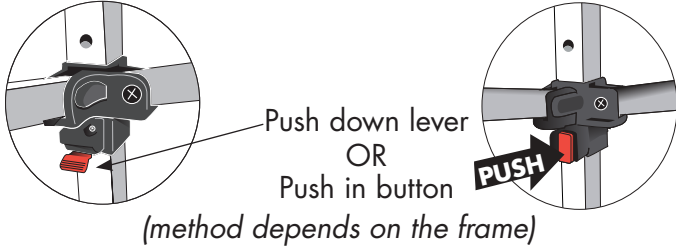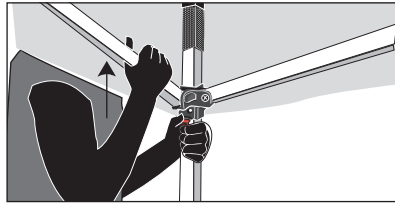


Push down lever  
OR  
Push in button

(method depends on the frame)

### Step 7

Lift the apex of the Canopy (3) into place by turning the crank counterclockwise until the Canopy (3) is taut.

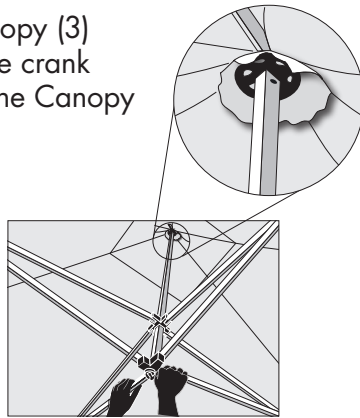

### Step 6

Place your foot on the base of the tent leg as you release and extend the telescoping legs. Raise the tent to your desired height and lock the legs into place.



Place your foot on the base as you lift


### NOTE:

To move an assembled frame, make sure a person is located at each leg. Lift and transport carefully in unison.



### Secure with Stakes


Simply drive provided stakes through the holes in the feet and into the ground (Option 1) OR Secure by looping rope through the "D" ring located on each tent corner (Option 2).

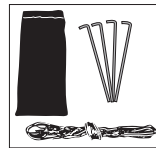

#### OPTION 1




#### OPTION 2

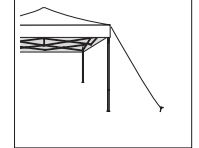

### Secure with Tent Weight - Sold Separately

Simply surround the tent leg with each half of the tent weight and fill with water or sand.

Fill with water or sand.

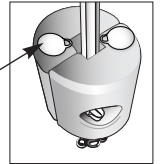

**\*FRAME MUST BE SECURED DOWN TO PREVENT WIND FROM LIFTING TENT AND CAUSING DAMAGE. NOT SECURING TENT PROPERLY VOIDS THE WARRANTY.**

## Warranty

All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor'\*\* warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.

\*\*STANDARD FRAME=1YEAR / DELUXE FRAME=2YEAR / PREMIUM FRAME=3YEAR parts and labor.

## Storage

Remove Canopy (3) from Frame (1) and collapse. Store collapsed Frame (1) in soft case (provided) as well as folded Canopy (3) in front pocket. Option: Hard Case item # 220025 (Not Included).

Store in a cool dry location.



Soft Case 220079-provided



Hard Case 220025-optional

## Care

To clean, wipe with damp cloth.

**MAKE SURE TO TAKE SPECIAL CARE TO NOT DRAG THE FRAME WHEN SETTING UP OR TAKING DOWN.**