


| Item | Qty. | Description |
|------|------|--------------------|
| 1 | 1 | Left Leg Assembly |
| 2 | 1 | Right Leg Assembly |
| 3 | 1 | Hinged Horizontal |
| 4 | 1 | Hinged Horizontal |

Steps:
 1) Attach lower and upper horizontal extrusions [3,4] between assemblies by slightly tightening BLACK knobs on backside of extrusion as shown.
 NOTE 1: Make sure velcro faces toward back and knobs face horizontally as shown in detail.
 NOTE 2: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion while turning knob until lock fully opens.


**** Various Accessories Available ****

Perfect 10 Hybrid Displays

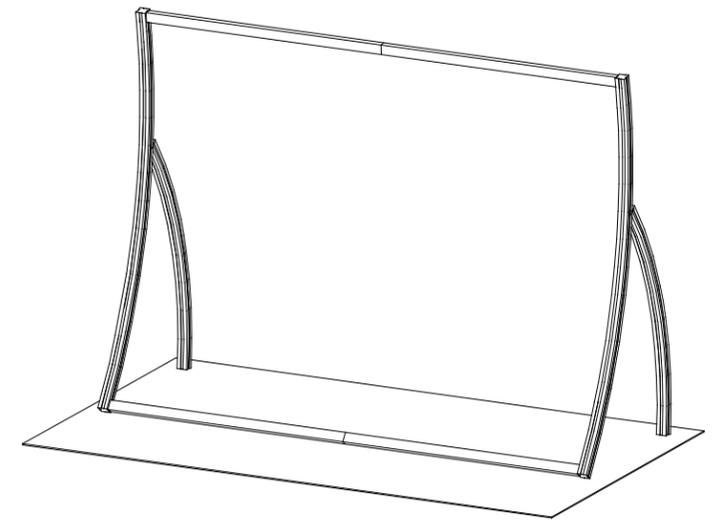


When assembled



NOTE: When assembling horizontals they should be placed approximately one inch from TOP and BOTTOM.

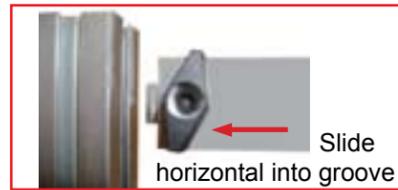

STAR indicates location of knobs on BACKSIDE of unit.




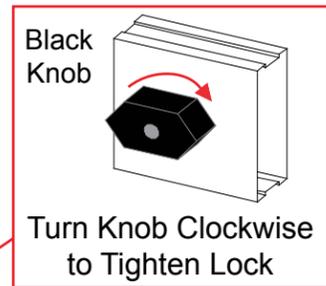


Rear View of Display

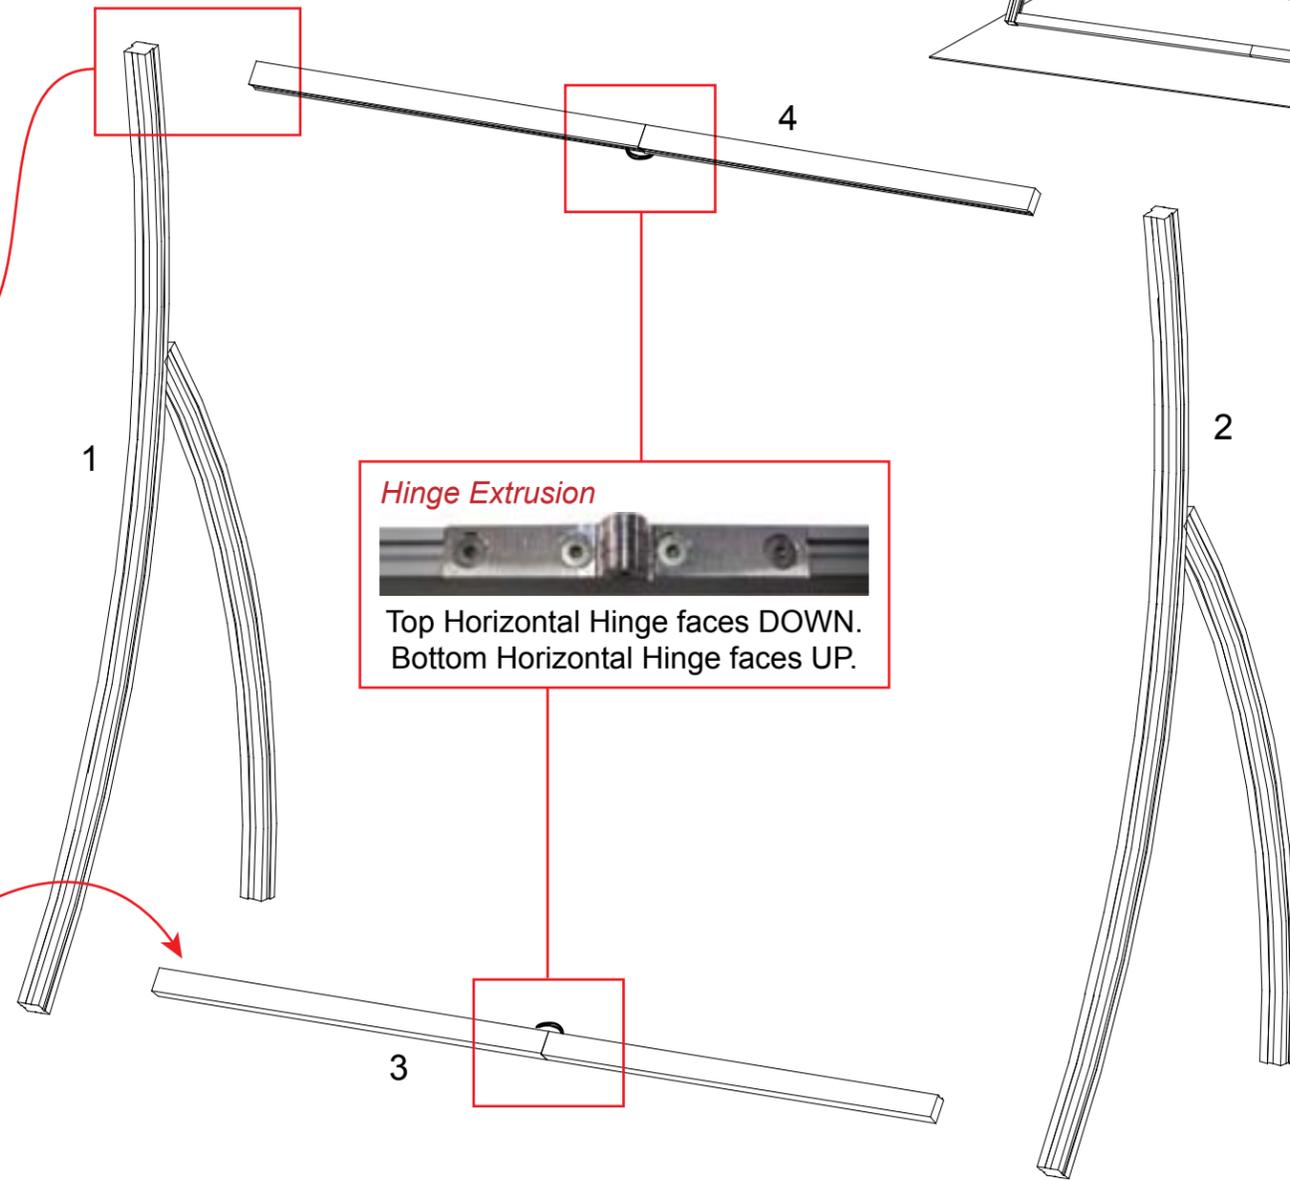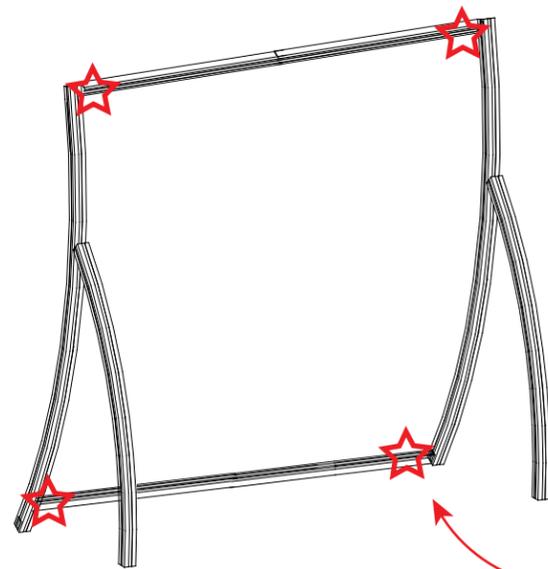

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

Top View of Each Level

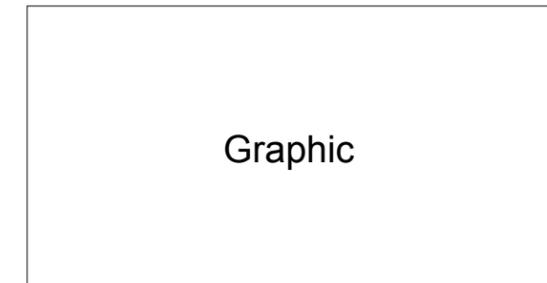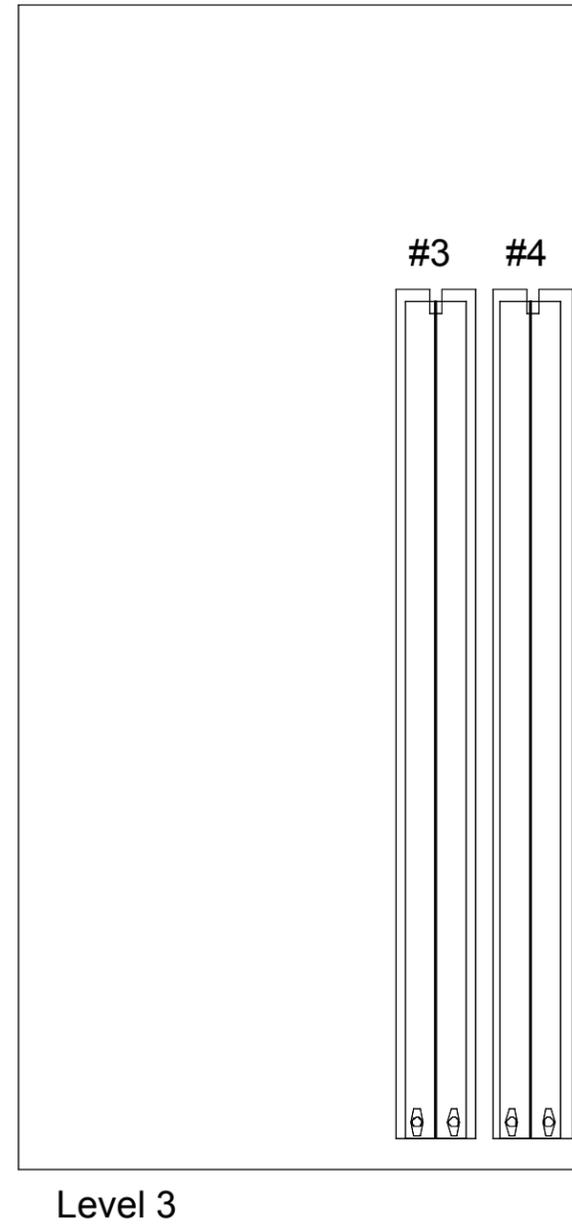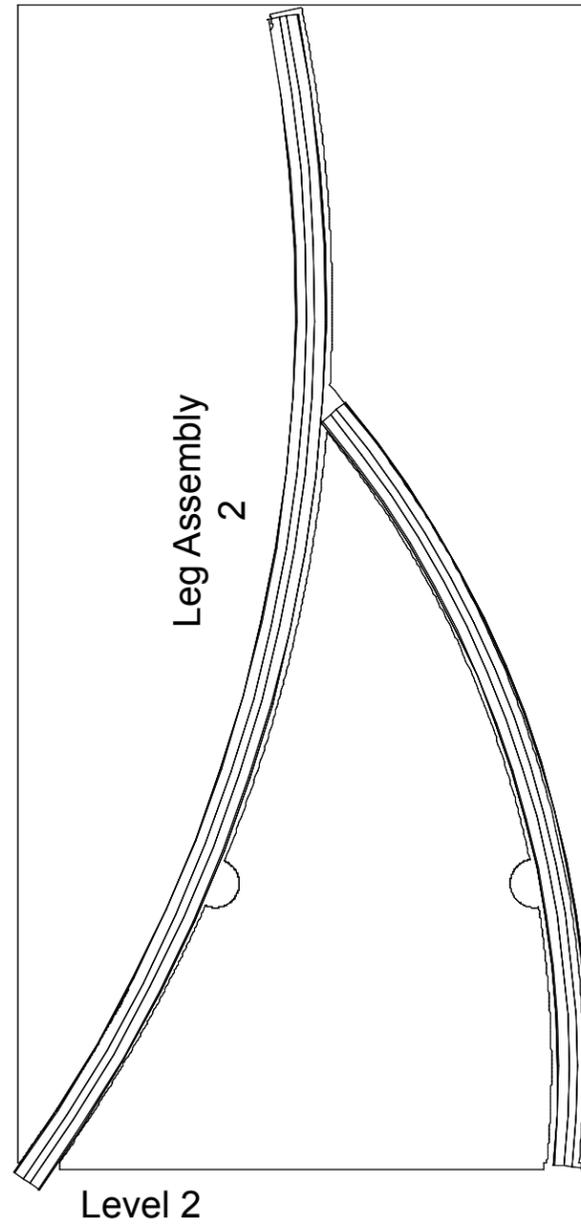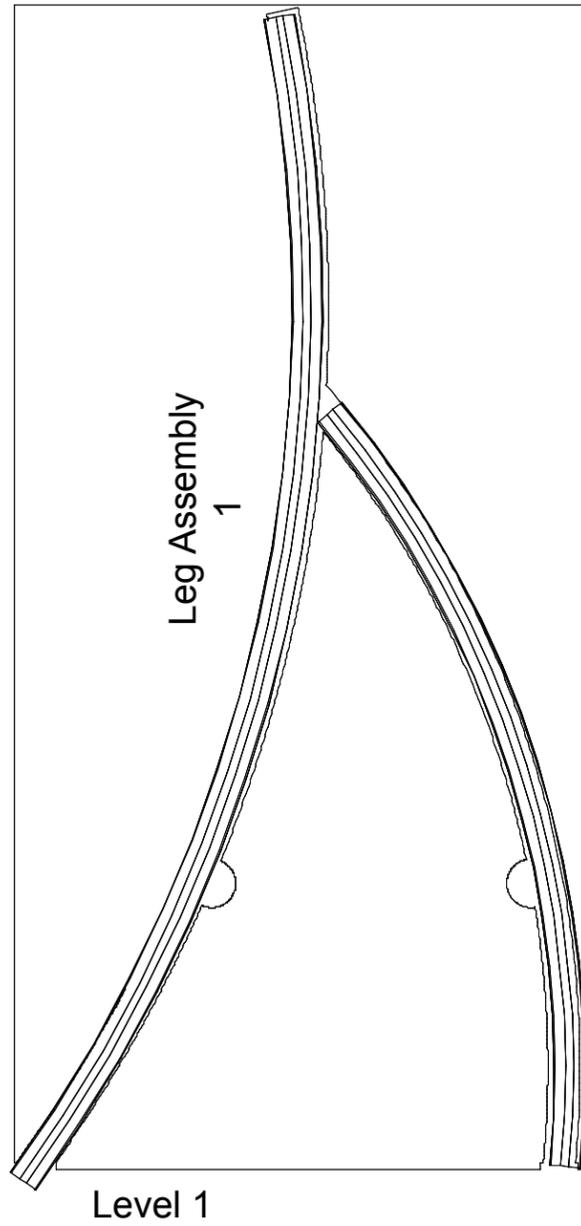

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING